

Multimedia System User Manual



Technical information about the system

The alphadidact® Digital multimedia system is a hardware-based collaboration system.

The advantages of the alphadidact® Digital are:

- The image transmission is in real time, without any lag
- The signals are not compressed or reduced in their resolution
- Transmission of the signals in their native and full resolution
- alphadidact® Digital is independent of the hardware or software in use
- No network (LAN, WLAN, etc.) is required
- No PCs or thin clients are required
- alphadidact® Digital is free of administration and maintenance
- Reliable system through external connection boxes
- Open system structure allows integration of third-party products
- Can be expanded to include additional functions or connections at any time

Features at a glance











The alphadidact® Digital multimedia system enables training content to be visualized. Signals from PCs, cameras, notebook, microscopes, etc. can be transmitted to all connected screens, projectors or large displays.











With just one touch of a button you can e.g.

- Send the signal from instructor to individual or all student monitors
- Send the signal from Cerec/Primescan system or microscope to all screens
- View any student's signal
- Send any student's signal to individual, group or all screens
- Darken all screens
- Send the signal of a tablet or smartphone to all screens
- Transmit signals from a digital camera to all screens
- Coupling of several Labs
- Use an additional notebook at the instructor's station

RESET		Reset of the complete system and all selections.
ALL		Instructor monitor will be transmitted to all student monitors.
Instructor	S1	Instructor monitor will be transmitted to single or group of student monitors
S1		Student 1 (S1) is selected as transmission source
S1	ALL	Student 1 (S1) will be transmitted to ALL monitors
S1	S14	Student 1 (S1) will be transmitted to Student 14 (S14)
BLANK	S1	Student's monitor (S1) is switched to dark
BLANK	ALL	All Student monitors are dark
Master		Activate coupling of both rooms.
Extern 1	PROJ.	Extern 1 (X-Ray) monitor will be transmitted to the projector.
Extern 2	PROJ.	Extern 2 (AV system) will be transmitted to the projector.
NOTE BOOK		Notebook becomes a transmitter. The desired destination must now be selected (e.g. ALL)

The sender of a signal (source) is indicated by a blinking LED!

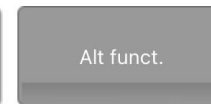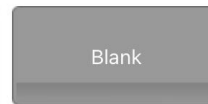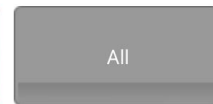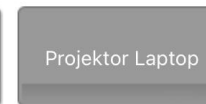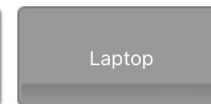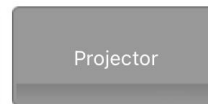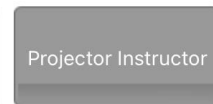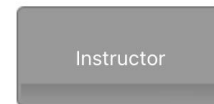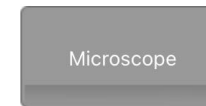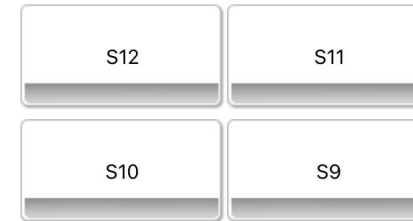

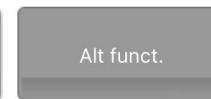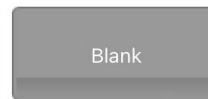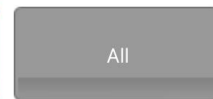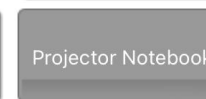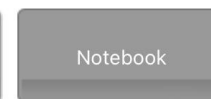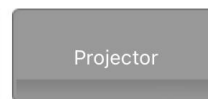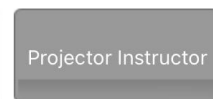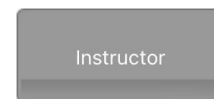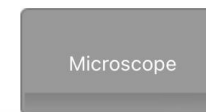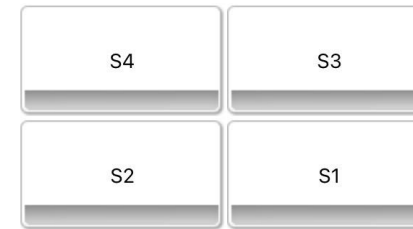



Reset of the complete system and all selections

Instructor and all Students see their own local monitor signal

To start a signal broadcast, please select first the signal source (such as INSTR.) and then the receiving monitor

Example:

To broadcast the Instructor to all student monitors press:

„Instructor“ + „All“

or

„All“

To broadcast the Instructor to all student monitors + Projector:

„Instructor“ + „All“ + „Proj.“

To broadcast the Instructor to student no. 1 and 2:


„Instructor“ + „S1“ + „S2“

16:15 Mon 19 Feb



Simu Lab2

48%

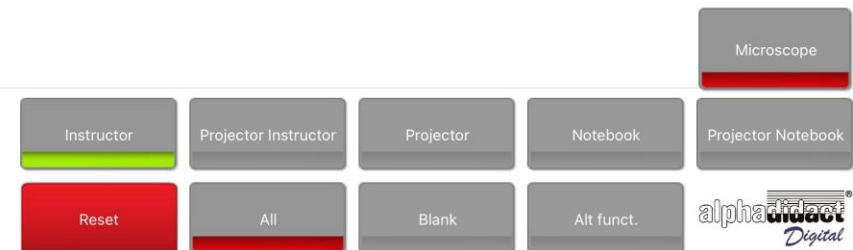

The sender of a signal (source) is always indicated by a flashing LED!



RESET of all functions

By pressing ALL, the Instrutor signal will be transmitted to ALL student monitors

To broadcast Student 24 to all please press:

„S24“ + „All“

To broadcast Student 24 to Student 10 press:

„S24“ + „S10“

To broadcast Student 24 to a group of students (8-11) press:


„S24“ + „S8“ + „S9“ + „S10“ + „S11“

To broadcast the microscope signal to all please press:

„Microscope“ + „All“

Any signalsource in the lab can be broadcasted to the „PROJECTOR“

(external devices can be all sources providing a HDMI/DVI/Displayport signal, such as microscopes, cameras, Cerec/Primescan, Laptop, AppleTV etc.)

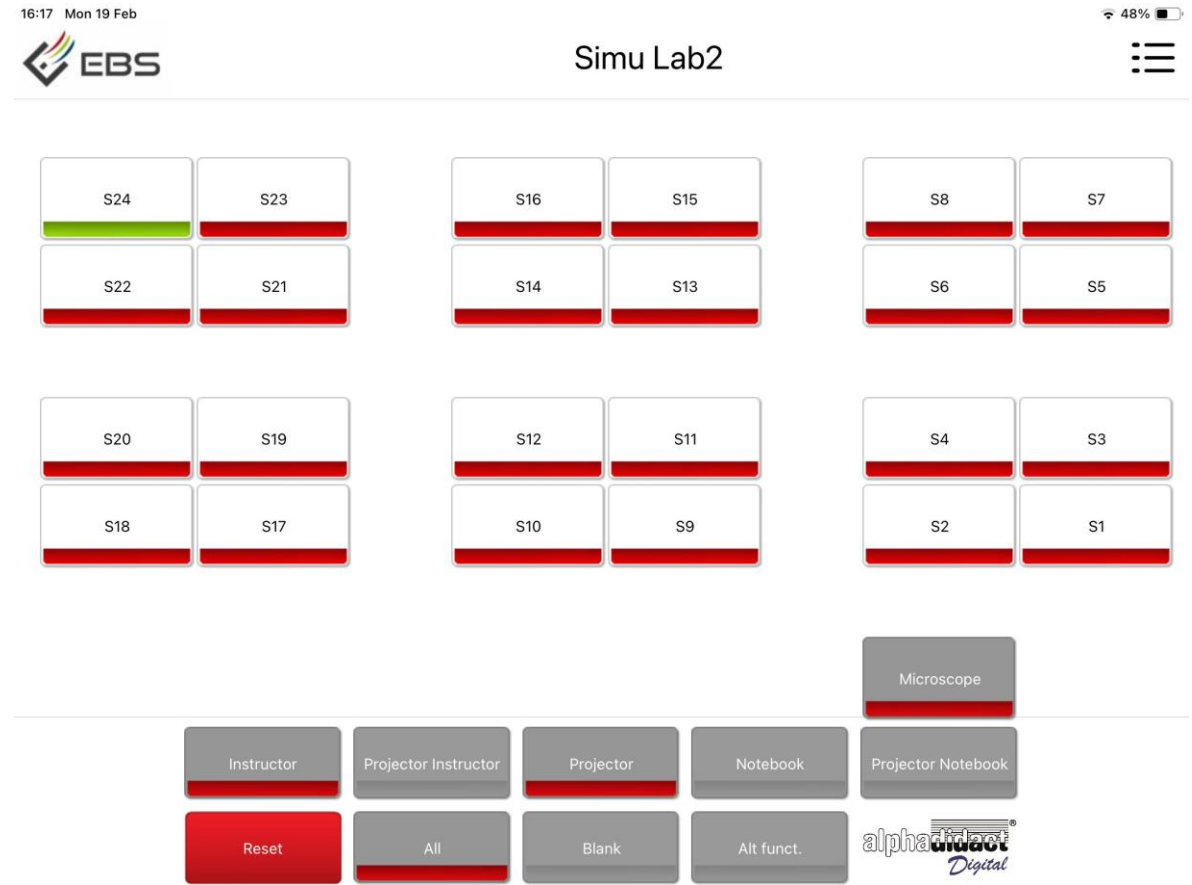

Simultaneous transmission of two signals


Projector
Instructor

Projector
Notebook

The "Projector Instructor" and "Projector Notebook" buttons are not reset by the "Reset" button, but are activated and deactivated again by pressing the button.

If the "Display-Instructor" or "Display-Notebook" button is activated, any other function/selection can be executed simultaneously.

Example:
Transfer your computer signal to the central projector/display with "Display-Instructor".
At the same time you can switch your notebook signal to all ("Notebook" + "All") or transmit a students signal (e.g. Student 3) to all screens ("S3" + "All")

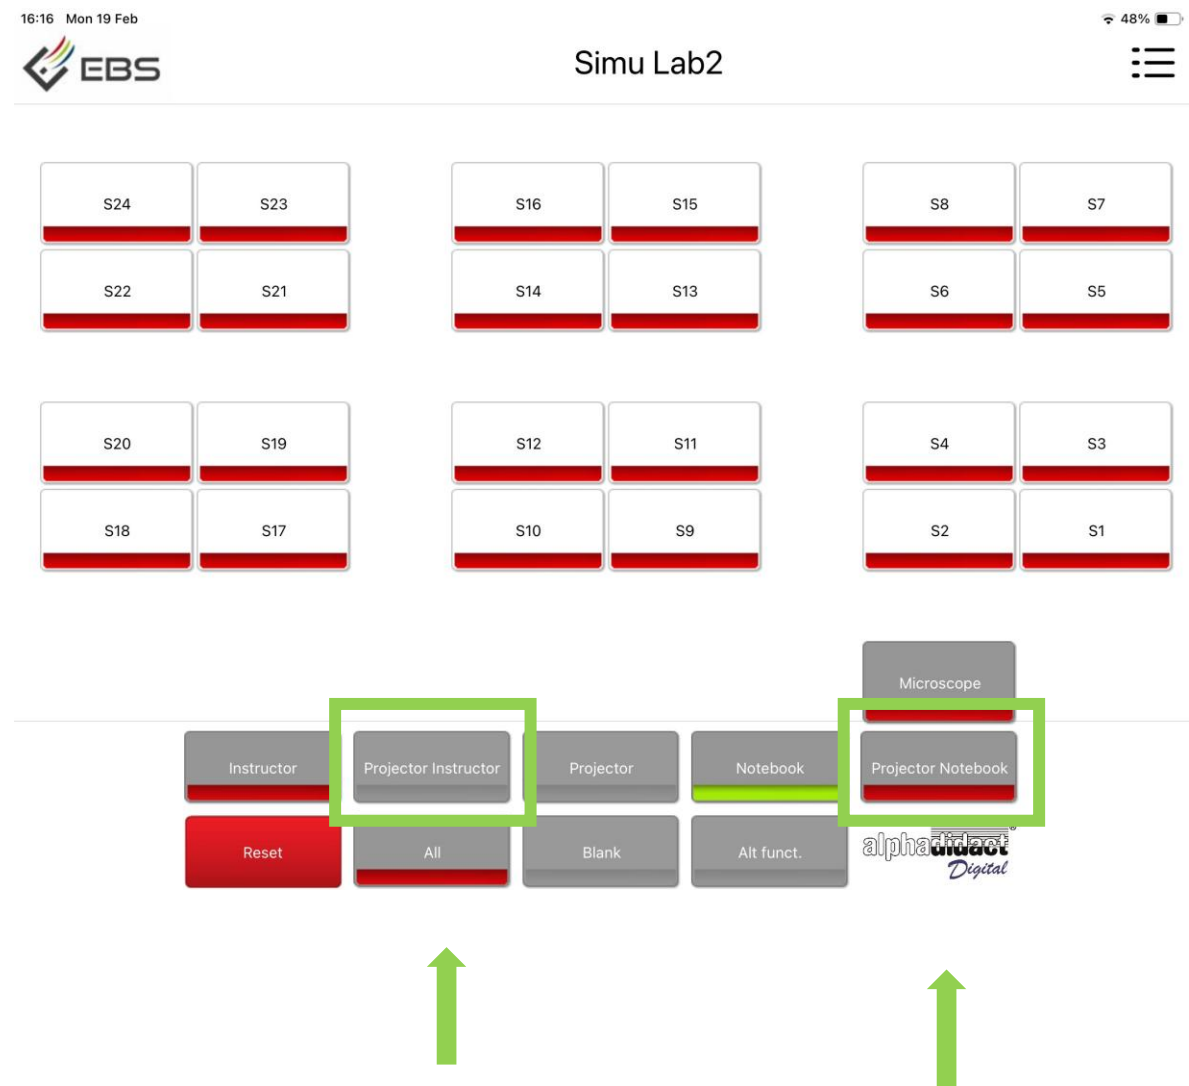



manufacturer

EBS Euchner Büro- und
Schulsysteme GmbH

Ernst-Leitz-Str. 3 | 63150 Heusenstamm (Deutschland)
Tel.: +49 6104 3313 | Fax: +49 6104 1783

info@ebs-euchner.com | www.ebs-euchner.com
<https://www.youtube.com/user/EuchnerBS>

